

## ENEREDGE® SERVICE TEMPERATURES

### APPLICATION NOTE:

The service temperature of EnerEDGE spacer (within the cavity of a normally-glazed IG unit in a structure) is in the range of -40 °F (-40°C) up to 203 °F (95°C). The installed spacer's environment is mitigated from the exterior conditions given that the IG cavity separates the temperature of the exterior from the temperature of the interior of the structure.